



Asus ROG G751JL-BB17T29 Hard Drive Replacement

This guide will show how to remove the Hard Drive housing Cover and allow for the removal and replacement of the Hard Drive.

Written By: Kyle Miller





TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Hard Drive




- Lift the rubber cover on the back of the laptop.
- Remove screw with a Phillips screwdriver.

Step 2

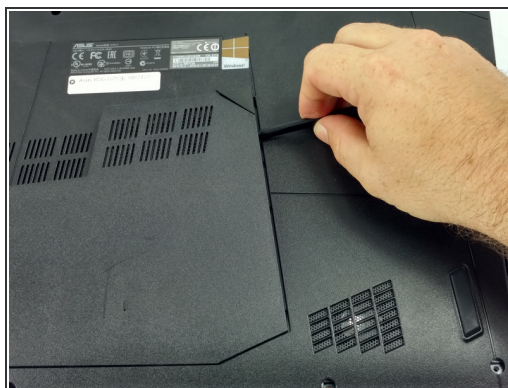




- Using the nylon spudger, remove the back center panel.

Step 3

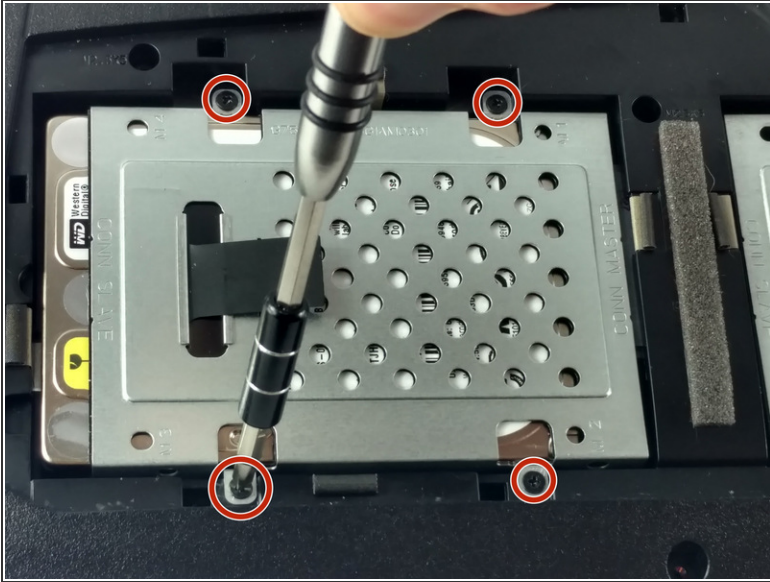

- Remove the four 2.4 mm screws securing the left hard drive with a Phillips screwdriver.
- Use the pull-tab to lift the hard drive housing and pull the hard drive away from the connector.

Step 4

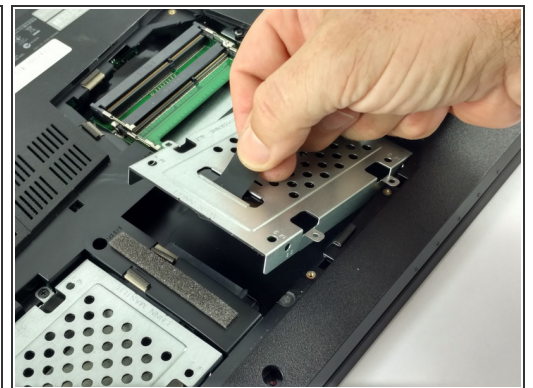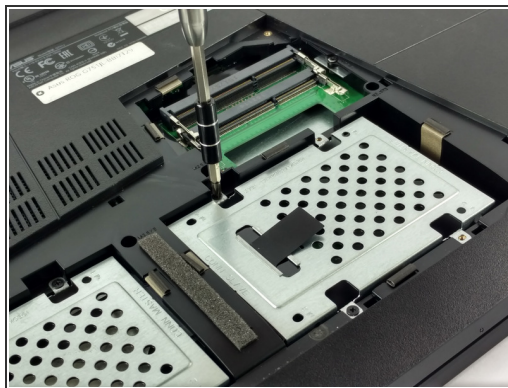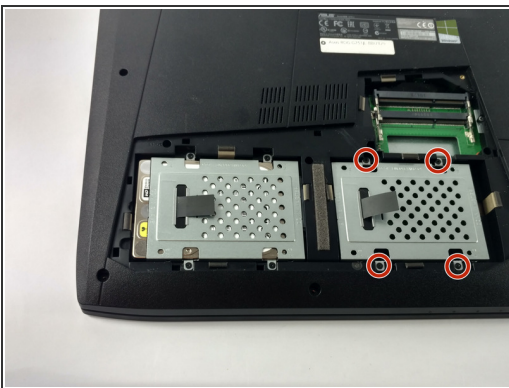

- Remove the four 2.4 mm screws securing the right hard drive housing with a Phillips screwdriver.
- Use the pull-tab to lift the hard drive housing and pull the hard drive away from the connector.

To reassemble your device, follow these instructions in reverse order.